

ROLLTRAK

DOOR & WINDOW SPECIALISTS

FLYSCREEN PLUNGER PIN

Model Number:	Tools required:
R3748 & RFSR007	Drill, 5mm & 6mm high speed drill bit.

Step 1

Drill a 5mm hole through the channel as shown.

Step 2

Push the pin into the hole from the mesh side first.

Step 3

Tap the pin until the head is seated in the frame.


Step 4

Fit the screen & locate the pin positions to drill 6mm holes in the frame to accommodate the plunger.

Step 5

The plunger can be pulled out if the frame needs removing.

**PULL TO
EXTRACT**

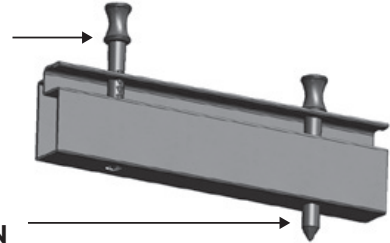

**CLOSED
POSITION**



**SCAN FOR INSPIRATION
AND HANDY TIPS:**



**CONNECT WITH US!
ROLLTRAK.COM.AU**