

ROLLTRAK

DOOR & WINDOW SPECIALISTS


SQUARE RAISED HANDLE

Model Number:

RDAS024, RDAS025, RDAS026 & RDAS027

Tools required:

Drill, pencil, appropriate high speed steel drill bit.

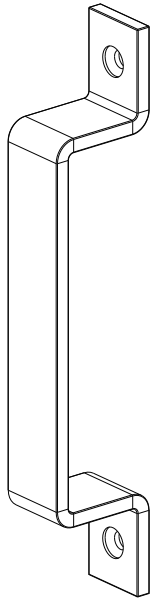

x1



x2

ST5.5 x 32mm

