

ROLLTRAK

DOOR & WINDOW SPECIALISTS

FLYSCREEN 22MM CORNER STAKE ALUMINIUM

Model Number:

RFSR003 & RFSR004

Tools required:

Mitre Box (R3550 & RFSR009), Fine toothed hacksaw.

STEP 1

Before inserting the corners, lay out the channel and check the sizes and cuts are correct.

STEP 2


Use the corner stakes to assemble the frame.

STEP 3

Insert the corner into the mitred end of the flyscreen. Be sure to tap the corner until it has settled midway.

STEP 4

Assemble the next piece of frame until flush with the first frame. Add the flyscreen mesh.

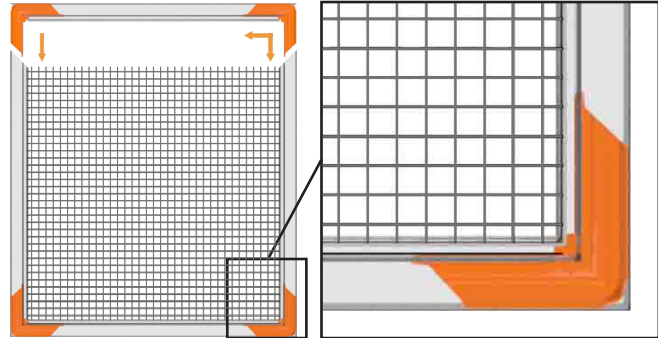

**SCAN FOR INSPIRATION
AND HANDY TIPS:**



**CONNECT WITH US!
ROLLTRAK.COM.AU**