

ROLLTRAK


DOOR & WINDOW SPECIALISTS

2-IN-1 FLYSCREEN ROLLER - TRIMMER & ROLLER COMBO

Model Number:


RFSR001

Step 1

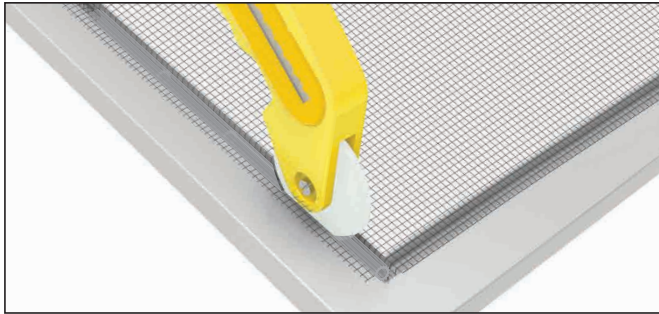

Align the roller with the spline and flyscreen frame channel. Apply slight force while feeding the spline through as you roll, allowing quick and easy insect screening installation.

Step 2

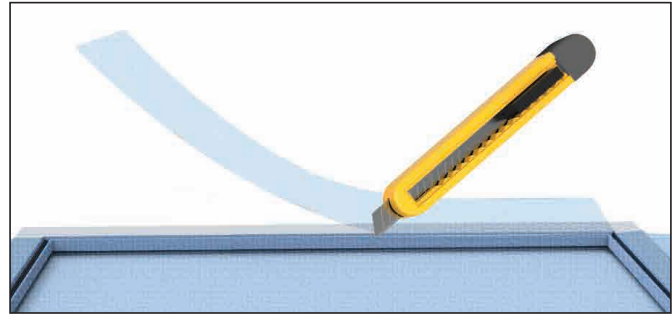

Once screening is secured onto the frame, use the trimmer to cut along the spline channel pulling the excess mesh firmly to achieve an even cut. Gently push downward as you slide the blade along and cut them evenly into the corners.



**SCAN FOR INSPIRATION
AND HANDY TIPS:**



**CONNECT WITH US!
ROLLTRAK.COM.AU**