

ROLLTRAK

DOOR & WINDOW SPECIALISTS


WALL MOUNTED DOOR GUIDE

Model Number:


R90150, R90155, RDAS028, RDAS029, RDAS063 & RDAS067

Tools required:


Drill, tape measure, level, pencil, appropriate drill bit.

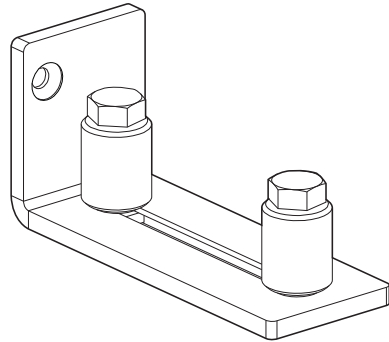

x1

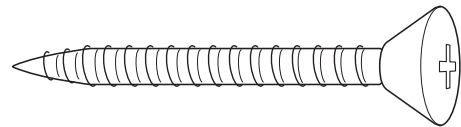

ST4.8 x 32mm x2

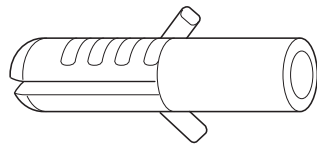

Ø8 x2

